

E-CARTONIE

PROFESSIONAL CAMERA SUPPORT

FOCUS 22✓



CARTONI ® / All rights reserved ©

User Manual

Version: 2.2

Issue date: Jun 2018

CARTONI S.p.A.

Via di Portonaccio, 33/B
00159 - Rome (Italy)
phone. +39 06 4382002
fax. +39 06 43588293
email. cartoni@cartoni.com

www.cartoni.com

USER MANUAL

INDEX

1. Safety & Set-up instructions
2. Operating elements
3. Procedures
4. Technical data
5. Maintenance
6. Warranty
7. Accessories & Product line

1. SAFETY & SET-UP INSTRUCTIONS

The **FOCUS 22** ✓ Fluid Head is specifically designed to support the wide variety of new ENG cameras, so compact yet so fully accessorized, featuring the patented CARTONI “wing” continuously adjustable counterbalance.

With its broad range of payloads – 3 kg (6.6 lbs) to 22 kg (49.0 lbs) - The 22 is the ideal partner for all news gathering and outdoor shooting jobs.

Rugged but easy to operate the new Fluid Head has all the ergonomic settings at the right place. Fluid drag in both pan and tilt feature the distinctive renowned CARTONI patented infinitely adjustable labyrinth system.


Positive locks, wide range sliding platform incorporating the European style quick release plate, a switchable illuminated spirit level completes the operating specs.

FOCUS 22, weighs only 3.9 kg (8.6 lbs) thanks to the extensive use of extremely lightweight magnesium alloys.


The 22 interfaces with all 100 mm bowl base tripods. In the Focus 22/150 version, it interfaces with the all 150 mm bowl base Tripods and with Pedestals through the standard Vinten 4 bolts.

- Before using the product read this user manual.
- Before installing the Fluid Head on the Tripod check the Tripod stability.
- Verify that the camera payload (including lenses and accessories) is lower than the maximum capacity of the Fluid Head.
- Before installing the camera make sure that the Fluid Head is in good conditions and bears no evident damages.

2. OPERATING ELEMENTS

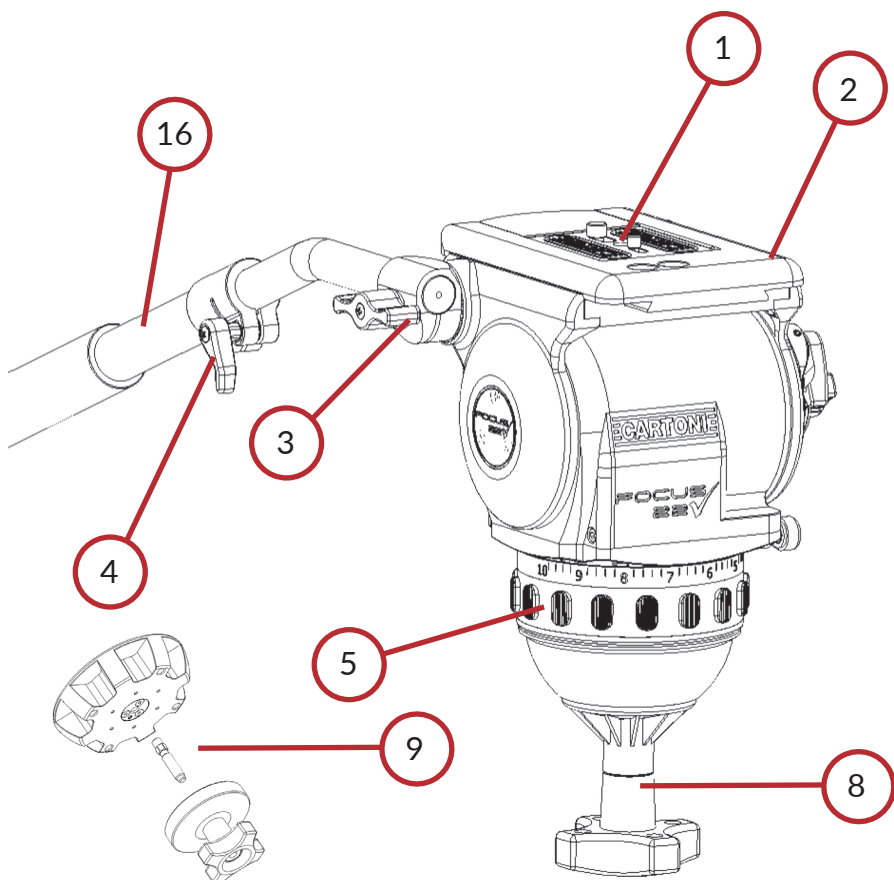

1. Camera plate
2. Sliding camera platform
3. Pan bar attachment
4. Pan bar extension
5. Pan drag selector
6. Pan brake lever
7. Tilt brake lever
8. Tie down knob
9. Tie down shaft removal

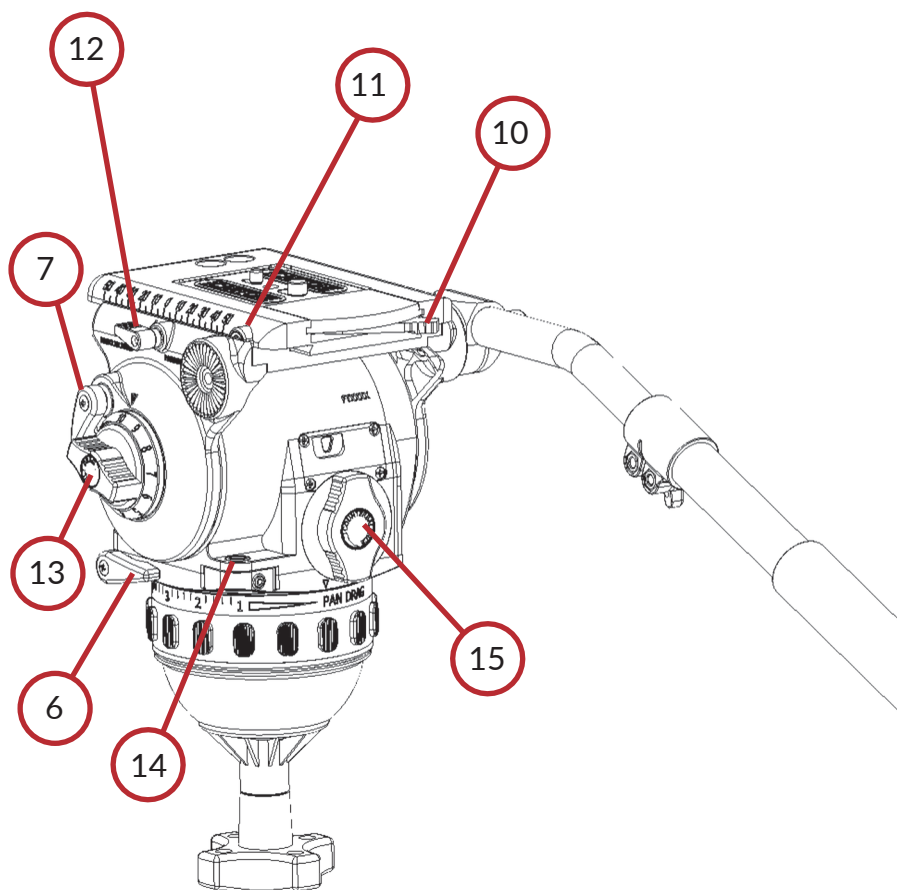

- 10.** Camera plate release lever
- 11.** Safety button
- 12.** Sliding platform lock
- 13.** Tilt drag selector
- 14.** Illuminated spirit level
- 15.** Counterbalance selector
- 16.** Pan bar

3. PROCEDURES

- 1 - Place the FOCUS 22 on your Tripod by loosening the tie-down knob (14) under the Fluid Head and level using the level bubble (12). In low light conditions, press button for light.
- 2 - Connect the Pan bar (15) to the Fluid Head tightening the lever (3) on the Pan bar attachment and select your desired operating angle. The telescopic Pan bar length can be adjusted via lever (4).
- 3 - Lock both Pan and Tilt brakes (6 & 7), turn both Tilt drag selector (11) and counterbalance knob (13) to the minimum.
- 4 - Open the Camera plate lock lever (8) completely to release the camera plate (1).
- 5 - Remove the Camera plate (1) from the sliding Camera platform (2) by squeezing simultaneously Camera plate lever (8) and the safety button (9). Attach the Camera plate (1) to the bottom of the Camera and tighten the clamping screw to secure the Camera. Try to center the Camera plate on the Camera, keeping the center of gravity position in mind.
- 6 - Lock the sliding platform lever (10), click the Camera into the quick release sliding platform (2), the plate will lock into place.
- 7 - Hold the Camera in horizontal position with the Pan bar (15) and release the Tilt brake lever (7). Release the sliding platform lever (10) and find the correct center of gravity position, by sliding the Camera platform (2) back and forth until you have achieved the correct balance. Lock the sliding platform lock (10).
- 8 - Set the counterbalance system by turning the balance knob clockwise (13) to appropriate tension. The Camera has to stay at any tilt angle. Eventually fine-tune by adjusting the sliding plate.
- 9 - Unlock the Pan brake lever (6) and set the Fluid drag control by

adjusting selectors (5 & 11).

10 - The Focus 22 can be attached to most of the sliders via a 3/8" treaded hole under the Head. Remove the tie down shaft with a M10 key and find the hole underneath.

11 - When spirit bubble light fails it is time to replace the batteries (12). Pull out the battery tray.

4. TECHNICAL DATA

Minimum Payload Capacity	3 kg / 6.6 lbs
Maximum Payload Capacity	22 kg / 49 lbs
Weight Focus 22	3.9 kg / 8.6 lbs
Weight Focus 22/150	4.1 kg / 9.0 lbs
Pan Range	360°
Tilt Range	+/-90°
Counterbalance	Continuous
Fluid Drag	Continuous
Bowl Diameter	100 mm / 150 mm / Flat
Temperature Range	-40°/+60°
Camera Attachment	Euro-Style quick release

5. MAINTENANCE

With indoor use - when needed - just clean the FOCUS 22 and Tripod with a soft cloth. Dirt accumulated during storage may be removed using a brush or Air spray.

CARTONI products main mechanisms are sealed as they are also built for professional outdoor use.

However, use under rough conditions will require special care. Salt water is very corrosive and can cause extreme damages. In attempt to avoid further damage the Fluid Head should be washed off with fresh water at the earliest

opportunity and dried before storage.

Sand and dirt are abrasive and should be removed using a semi-stiff brush or Air spray.

Disconnect spirit level battery during long term storage.

6. WARRANTY

All CARTONI Fluid Heads & Pedestals have a free of charge three (3) year warranty. Register your product at www.cartoni.com within 30 days from date of first purchase/invoice to receive further two (2) year warranty for the unsurpassed free five (5) year warranty.

Tripods, spreaders, dollies and all accessories are guaranteed one (1) year from the date of first purchase/invoice.

CARTONI warrant that the product supplied will - under proper use - be free from defects in workmanship and materials and agrees that it will, at its option, either repair or replace any defective part within duration of warranty from date of first purchase with no labour charge.

This warranty does not apply to any CARTONI product that has been damaged in shipping or handling, abused, misused, operated contrary to instructions for use, neglected, normal wear or tear, modified or changed in design or construction or serviced by unauthorized parties.

Repairs or misuse by any unauthorized parties will void this warranty.

Warranty claims must be submitted – in writing - to the factory for verification or to an authorized distributor/dealer designated by CARTONI.

It is the end user's responsibility when ordering to ensure that the products ordered conform to his requirements.

All freight of product to CARTONI must be prepaid. All implied warranties are limited to the time period set forth herein & subject to change without notice.

No liability can be accepted for any variation.

7. ACCESSORIES & PRODUCT LINE

For the complete Accessories list & Product line please visit CARTONI's official website www.cartoni.com.

Every product has an updated list of compatible items sorted by groups, with descriptions and technical data.

CARTONI

SUPPORTS
YOUR
VISION



www.cartoni.com

